



 
 
 
 
 
 
 


Screw the legs on the bottom of the sofa, as shown in the schema.

Nr. 43



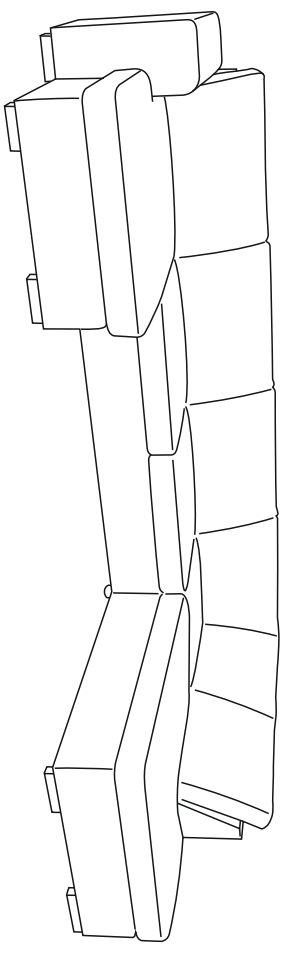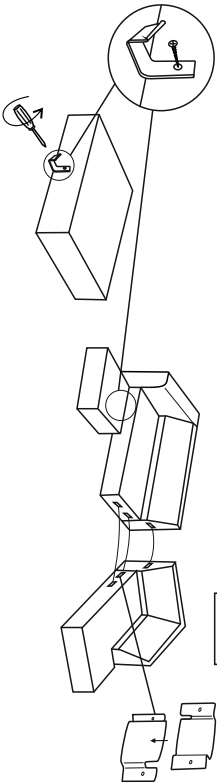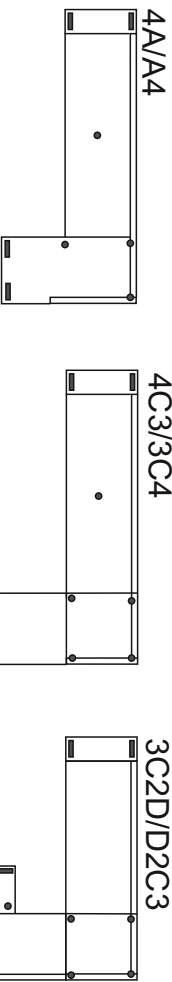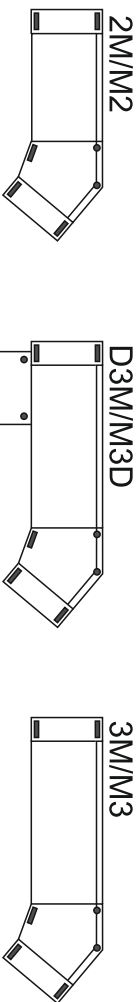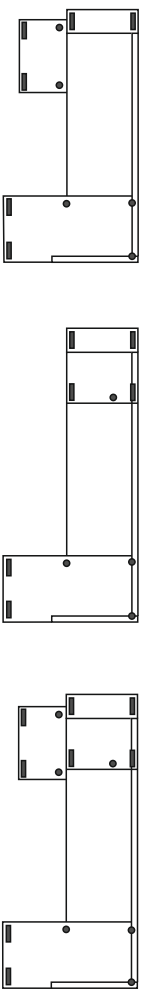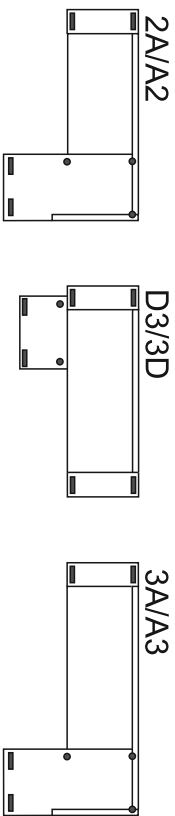


Nr. 29

5	
D	
E	
F	

 


# Connect

 
Do not throw away the packing materials until assembly is complete;  
From scratching or other damages: assemble this item on a soft surface, such as cardboard or carpet, to protect finish;  
Hardware may loosen overtime. Periodically check that all connections are tight;  
Protect sofa from an environmental factors such as : heat, direct sunlight and humidity;  
Do not use sofa outdoors.  
Do not fix the sofa yourself, sofa could be fixed only in our factory, our after-sales service workshop or by licensed and qualified professionals; by using only original replacement parts, otherwise, the warranty could be considered as void.

A	—
B	
C	
D	
E	
F	

For legs

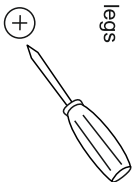 




For washers and nuts



 
A	—
1	

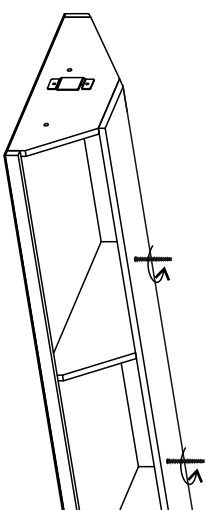Place the back on the smooth surface and fasten a bolt in each pre-drilled hole.



 
2	
B	
C	

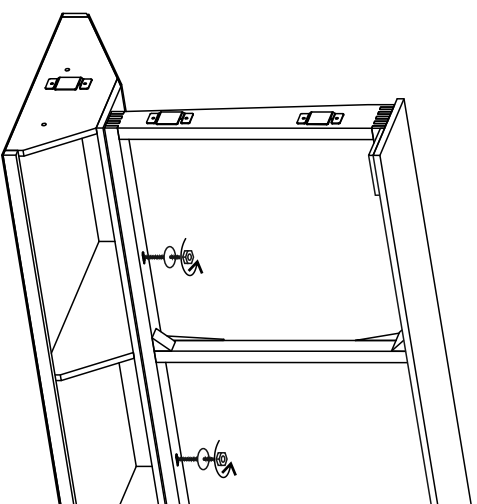

Place the seat in the top of the backabove the bolts, add washers and fasten nuts on each bolt, but keep it loose. Screw hook on top of the back.



 
3	
A	—

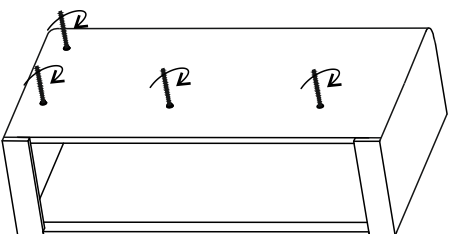


Fasten one bolt in each pre-drilled hole in the armrests.



4	
C	
D	

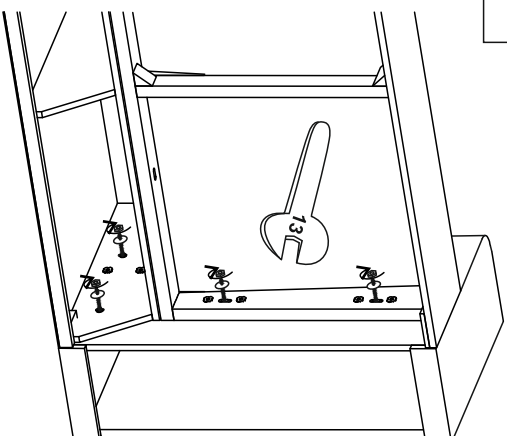Put the in the armrest together with the backrest and the seat. Fasten nuts on each bolt, but keep it loose.



5	
D	
E	
F	

Screw the legs.

